


# The Onida ON-1204CR LED Clock Radio

## Control locations

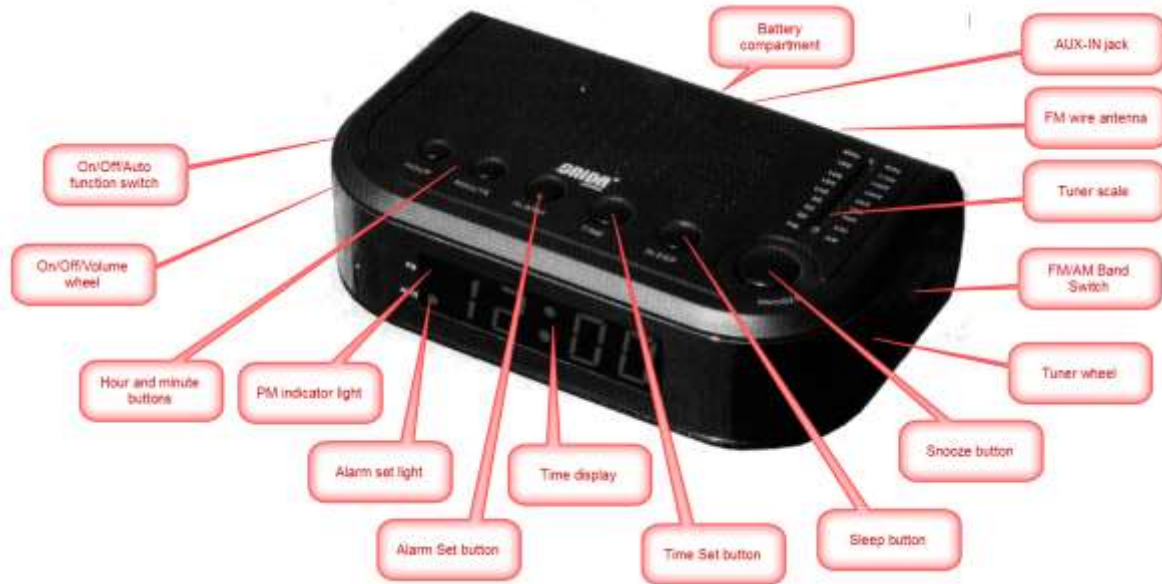

## POWER SUPPLY

If unplugged, plug the power cord into an AC outlet. A blinking signal will appear indicating the time. If the unit was on battery support, the time will be correct, otherwise it will default to 12:00 midnight.

## RADIO OPERATIONS

1. Slide the **Function switch** to the **ON** position and rotate the **Volume control** to switch on the radio.
2. Adjust the Volume Control to the desired listening level.
3. Set the Band Selector to FM.
4. Select a radio station with the Tuning Control.

87.9 FM	Praise (Seventh Day Adventist	101.1 FM	Radio ICCI
89.9 FM	Radio Cayman	101.9 FM	Rooster 101
92.7 FM	Star	103.1 FM	Love
94.3 FM	Westpoint / Lifetalk Radio	104.1 FM	Hot
94.9 FM	Spin	105.3 FM	Breeze
95.5 FM	Big Fish	106.1 FM	Kiss
96.5 FM	CayRock	107.1 FM	X107
98.9 FM	Vibe	107.9 FM	Weather

3. Loosen the cable antenna and adjust its direction to get the best reception if necessary.
4. To turn off the radio, slide the **Function switch** to **OFF** position.

## AUX-IN FUNCTION

To play music from an iPod or smartphone through the radio speaker, use the double headed cable in the **Aux-In** socket or bedside table drawer to connect the player to the radio.

## CLOCK SETTING

Time and alarm settings can be operated while the radio is in any mode.

**Time setting:** Press and hold the **Time set** button and then press the **Hour** or **Minute** button for hour and minute adjustment of the time. If the PM light in the front of the radio is illuminated, then the time you are currently setting is PM (afternoon/evening).

**Alarm Setting:** Press and hold the **Alarm set** button and then press the **Hour** or **Minute** button for hour and minute adjustment of the time.

## WAKE TO MUSIC

Use this sequence to set up to wake up to music:

- Press and hold the **Alarm set** button and then press **Hour** or **Minute** button to set the desired wake up time.
- Release the **Alarm set** button to show the current time.
- Repeat the steps of **LISTEN TO RADIO** to tune to your desired station and set the listening volume level.
- Slide the **Function** switch to **AUTO** position.
- As a confirmation, the **Alarm indicator** will on.
- The radio will play your selected station at the preset listening level automatically at the preset alarm time.

Push the **Function** switch to the **OFF** position to turn off the daily radio alarm.

## WAKE TO BUZZER

Use this sequence to set up to wake up to music:

- Press and hold the **Alarm set** button and then press **Hour** or **Minute** button to set the desired wake up time.
- Release the **Alarm set** button to show the current time.
- Rotate the **Volume** control clockwise until a clicking sound is heard.
- You will be awakened by the buzzer alarm.

Push the **Function** switch to the **OFF** position to turn off the daily buzzer alarm.

## SNOOZE FUNCTION

If you want a few extra minutes of sleep after the alarm wakes you, press the **Snooze** Button. The music or buzzer alarm will be temporarily switched off and will turn on again in approximately 9 minutes.

Push the **Function** switch to **OFF** to turn off the snooze function.

## SLEEP TO MUSIC

- Slide the **Function** switch to the position either **OFF** or **AUTO**.
- Press the Sleep Button once for 59 minutes of radio.
- To increase or reduce the automatic shut off time, hold down the **Sleep** button

and press **Hour** or **Minute** to adjust as required. Maximum sleep time is 1 hour and 59 minutes.

### SLEEP AND WAKE TO MUSIC

- Repeat the steps of **WAKE TO MUSIC**
- Press the **Sleep** Button to set the desired length of time of radio playing before sleep.
- The radio will stop automatically on expiry of your sleep time setting and will play again at your preset wake up time.

### BATTERY BACKUP

The sole purpose of the battery is to maintain the clock time until AC power is restored. Insert a 9 Volt battery in the battery compartment. Should there be a power failure, the clock will continue to function but the clock display will not illuminate. When AC power is restored, the display will indicate the correct time. Remember that the alarm clock functionality does not work while on battery.

### BATTERY REPLACEMENT

Replace the battery once a year or immediately if clock time is not maintained during a power cut.